



Accessory

CAR SUNSHADES INSTALLATION INSTRUCTIONS

VEHICLE DESCRIPTION:
PART NUMBER:

BK SHOGUN LWB
Sp037087



HARDWARE KIT

NO.	PART NAME	QTY.
1	CL-M01 Long Flat Clip	2
2	CL-M03 Long Dog Leg Clip	4
3	CL-M04 Short Dog Leg Clip	2
4	CL-P01 Adhesive Plastic Clip	10
5	3M-PRO Adhesion Promoter Sachet	1
6	Fitting Instruction	1
7	Storage Bag	1
8	Side Window Shade	2
9	Load Area Window Shade	2
10	Tailgate Window Shade LHS	1
	Tailgate Window Shade RHS	1

1



x 2

2




x 4

3



x 2

4

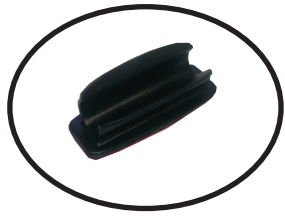

x 10

5



x 1

6




x 1

7



x 1

8

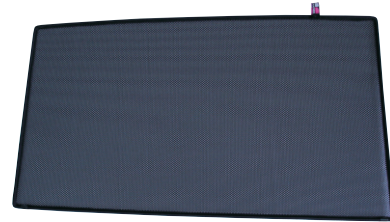

x 2

9



x 2

10



x 1

11



x 1

